


Posity

DOORDACHT WONEN


Notes: Don't tighten screws completely at first, just in case parts were assembled wrong and need disassemble. Tighten screws at last when all parts are put together

1

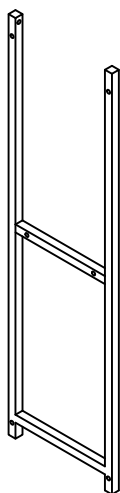


1PCS

2

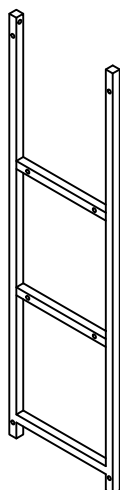


1PCS

3









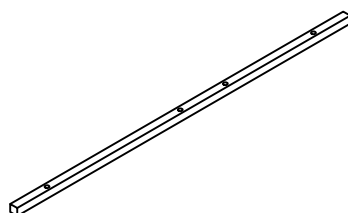




4PCS


4

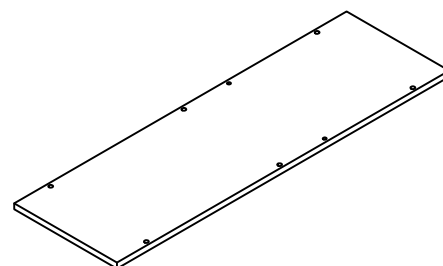

1PCS

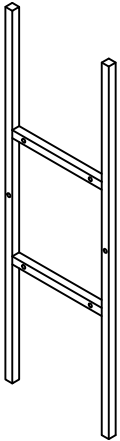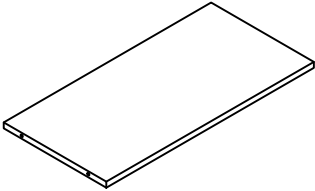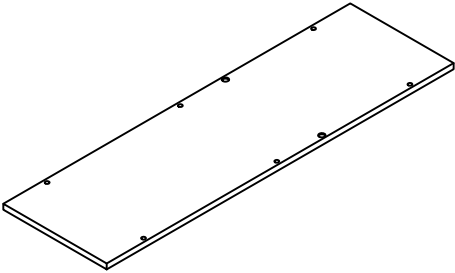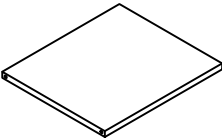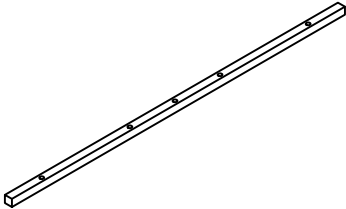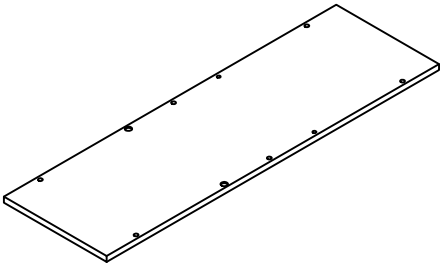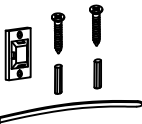
5		6		7		8
						
2PCS		4PCS		1PCS		1PCS
9	10	11		12		
						
1PCS	2PCS	2PCS		1PCS		
B	F	G	I			
 M7X50 24PCS	 M6X30 18PCS	 M6X35 16PCS	 M6X50 4PCS			
X	Y	Z	N			
 4PCS	 M8 4PCS	 2PCS	 M6X10 8PCS			


1	 1PCS
2	 1PCS

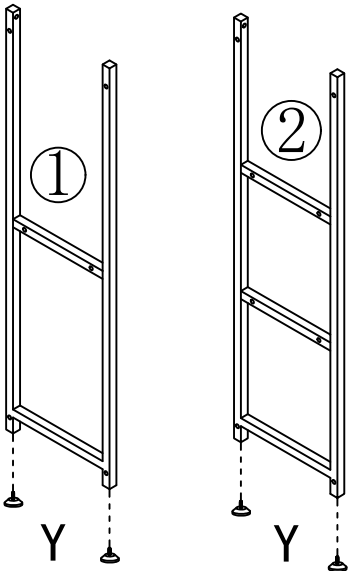


G	 4PCS
3	 2PCS


Step2

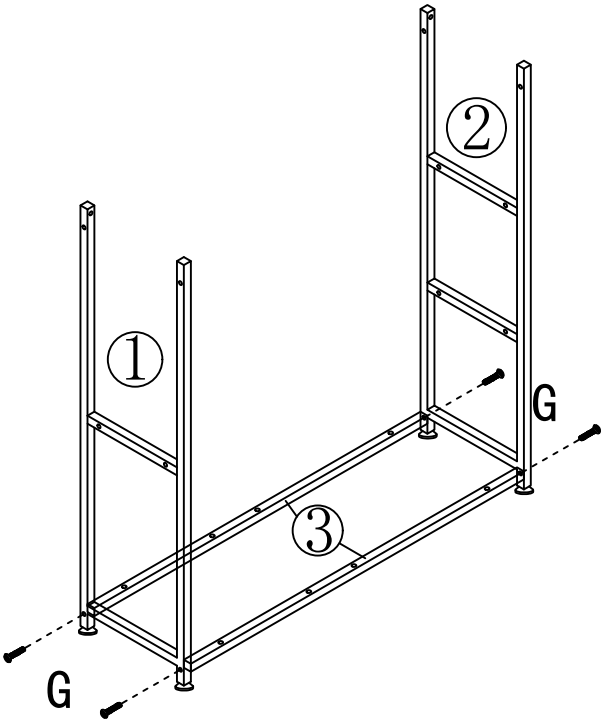

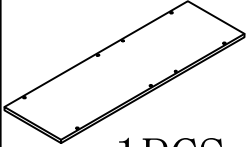
F	 6PCS
4	 1PCS

Step3

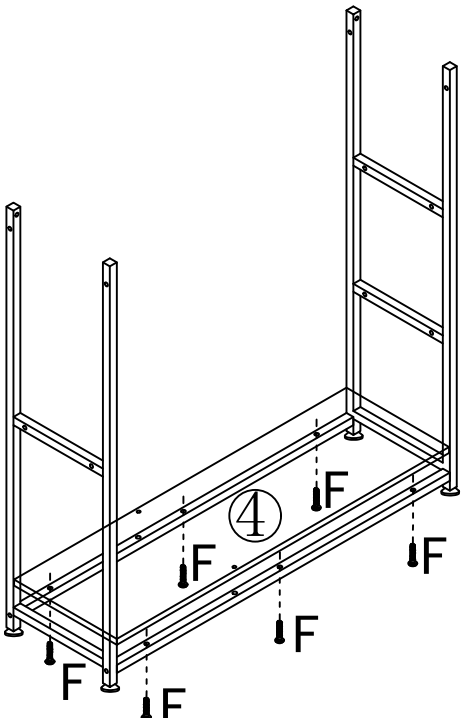


1	 2PCS
5	 1PCS


Step4

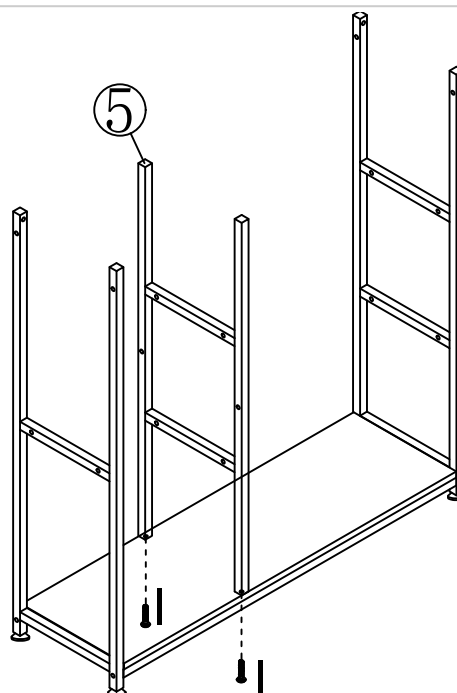


B	 8PCS
6	 2PCS

Step5

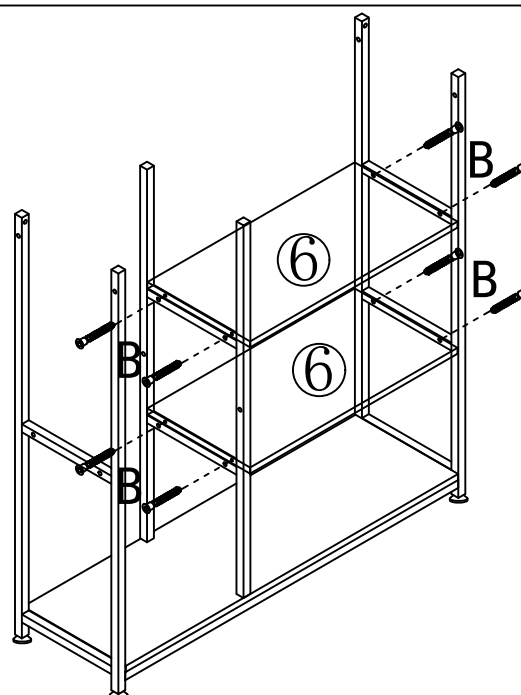

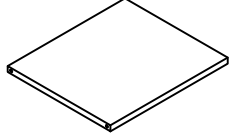
B	 4PCS
10	 1PCS


Step6

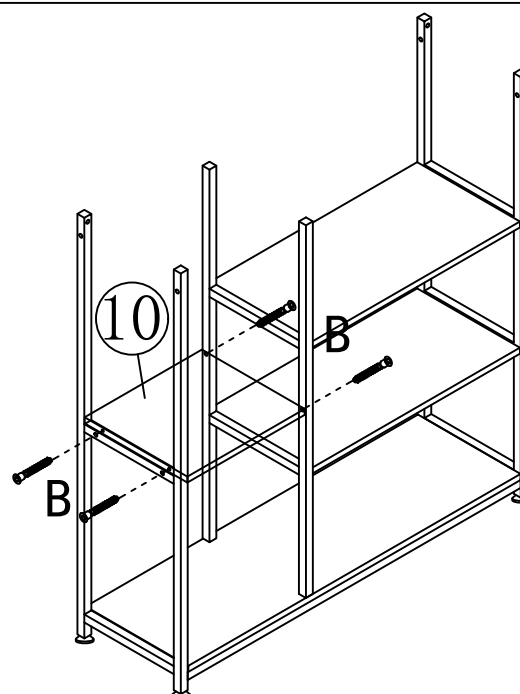


N		◎4PCS
X		4PCS

Step7

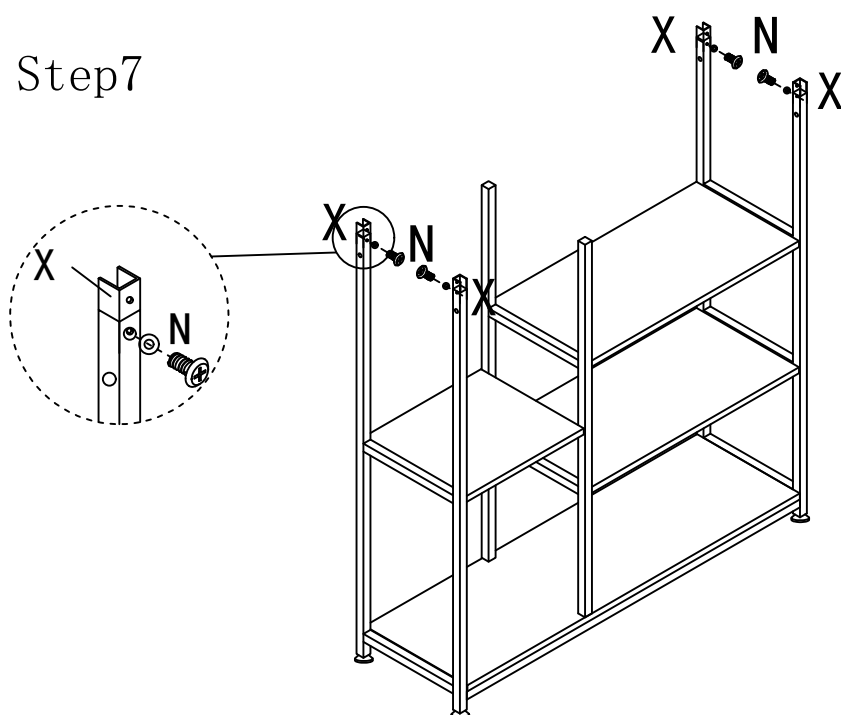


N		◎4PCS
8		1PCS
9		1PCS


Step8

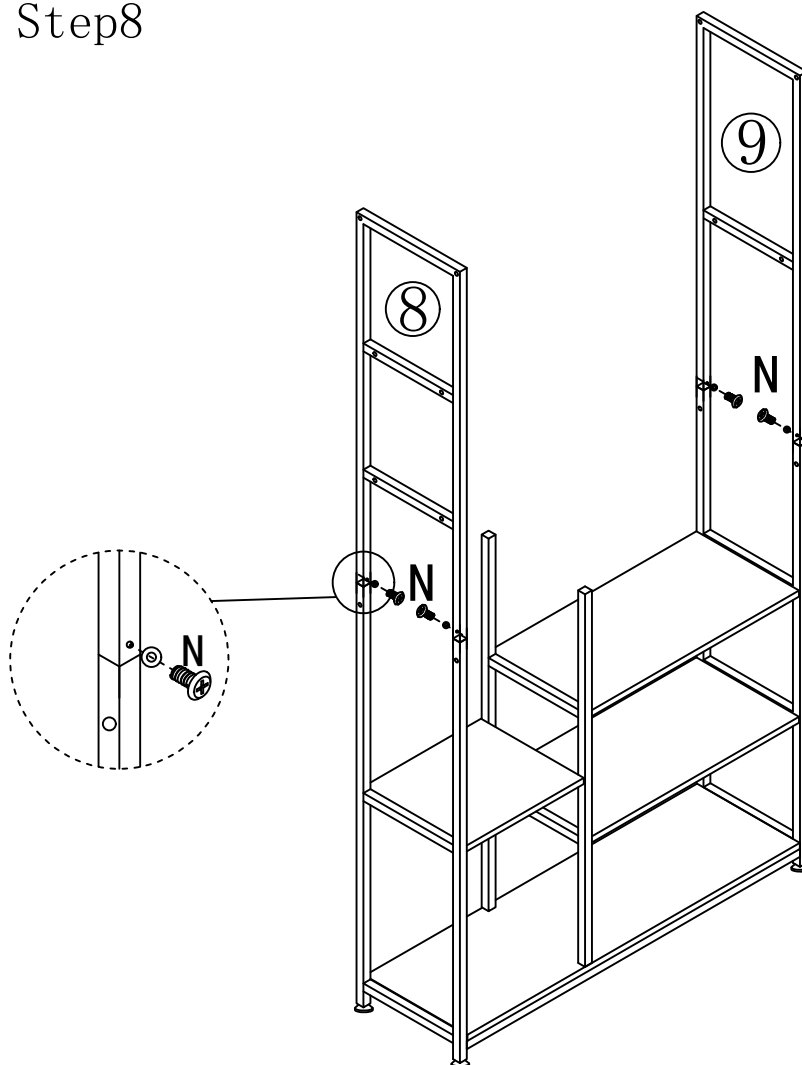


G	 6PCS
11	 2PCS


Step9

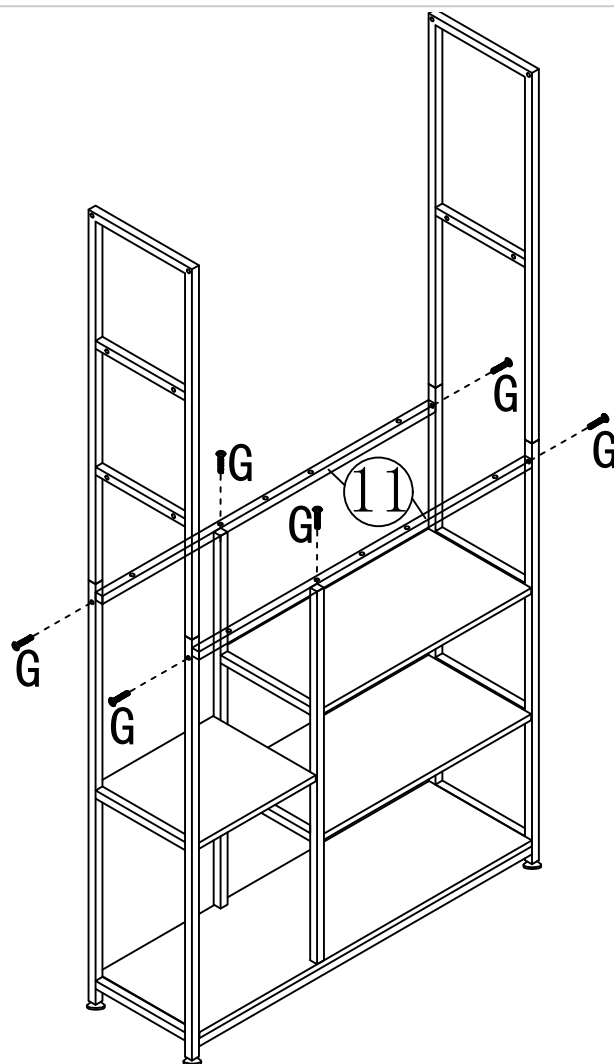

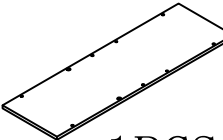
F	 6PCS
12	 1PCS


Step10

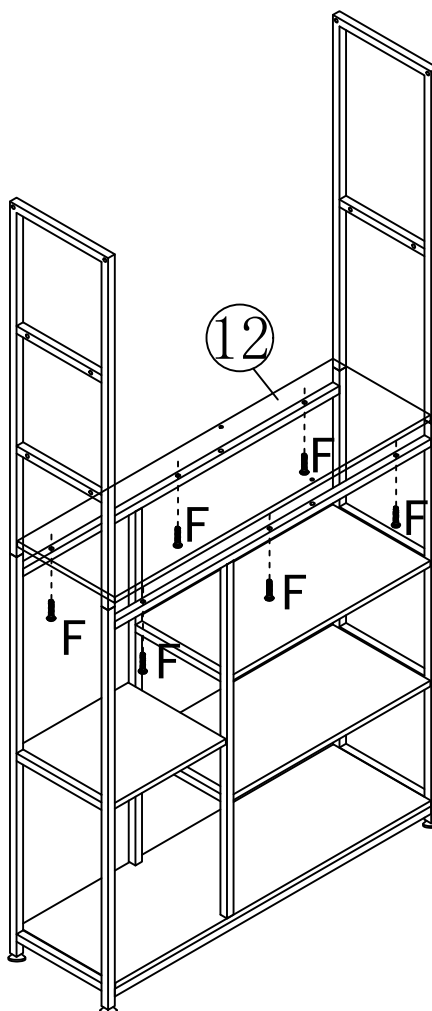


I	 2PCS
5	 1PCS

Step11

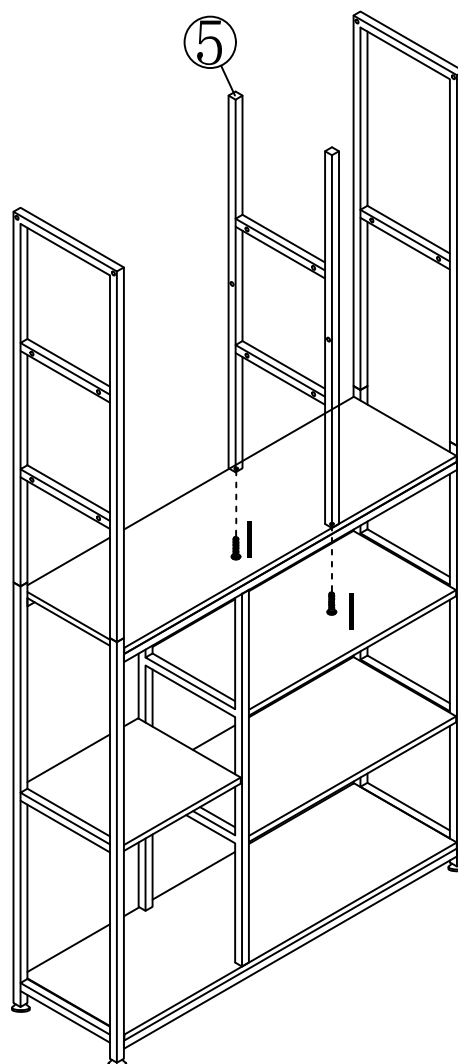

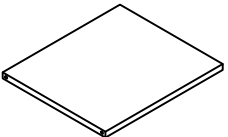
B	 4PCS
10	 1PCS

Step12

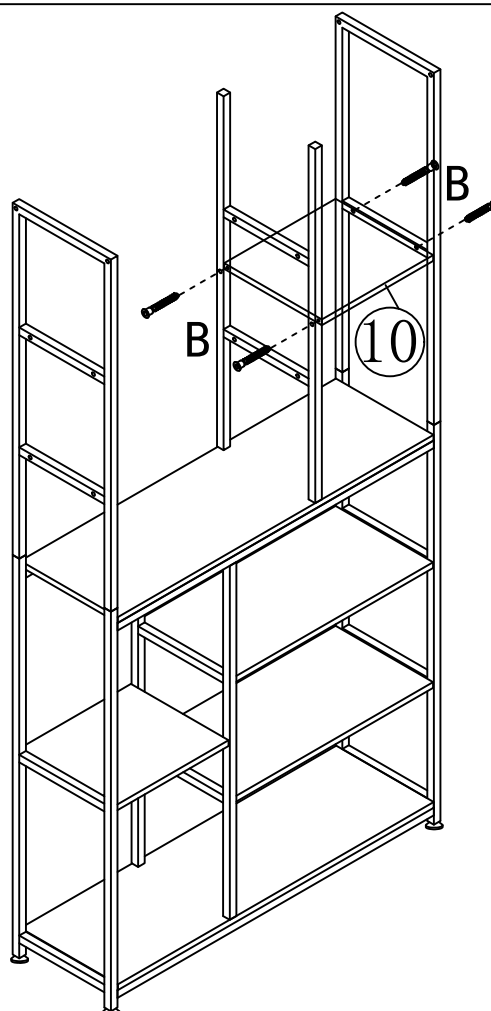


B	 8PCS
6	 2PCS


Step13

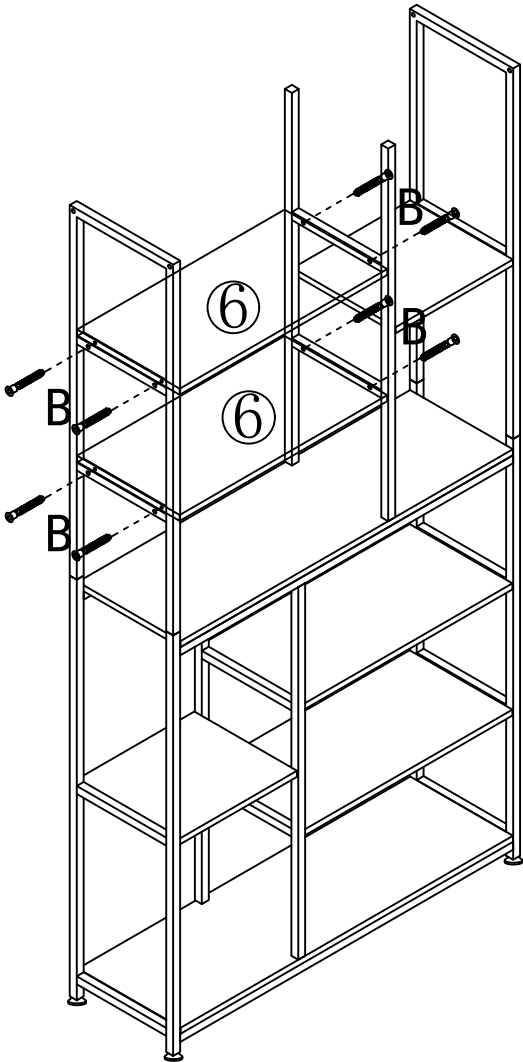


G	 6PCS
3	 2PCS

Step14

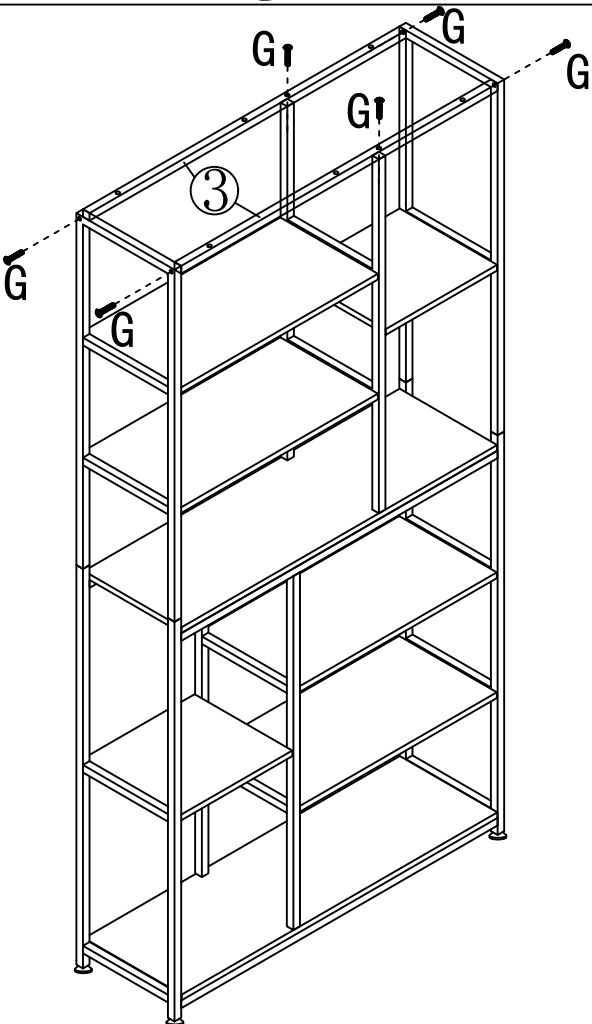

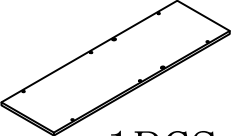F	 6PCS
7	 1PCS

Step15

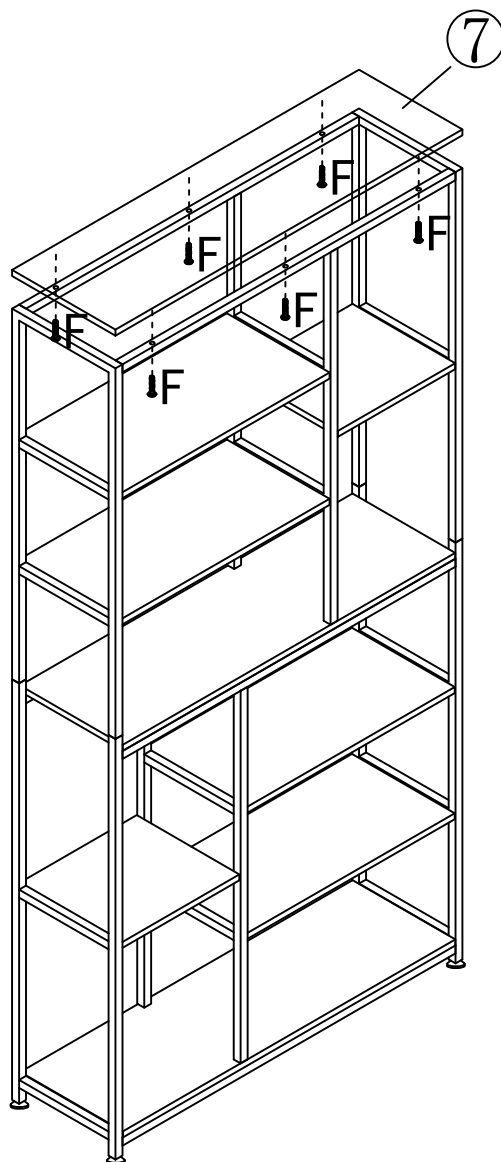

Posity

DOORDACHT WONEN